MAR401 series

AIR UNIT (R.UNIT)




Specification






Option: MP41 **Symbol**

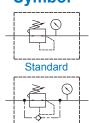

Backflow

MAR401 Bore No. 10A 8A 15A 1/4 1/2 Port size 3/8 Medium Air 1.5 MPa Max. operating pressure Proof pressure 2 MPa Standard type: 0.1~0.85 MPa Regulated pressure range High pressure type: 0.1~1.5 MPa Ambient temperature - 5~+60°C (No freezing) Pressure gauge (PG-20), L-type bracket Attachment Weight 450 g

Order example

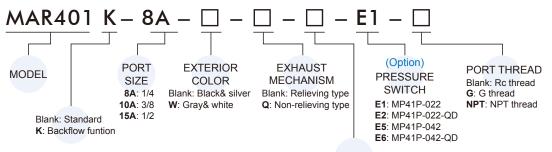


- * The backflow module can not be exchange with gauge. When choosing the flow direction is left to right, the knob is up.
- * Standard type regulator can not release the outlet pressure completely, even if inlet pressure was cut off, and the backflow function (K) must be applied to completely remove the residual pressure.
- * The (Q) non-overflow type regulator is used. When the output pressure is higher than the set pressure, the output pressure will not flow out through the exhaust hole.
- * PG-40 (C) and MP41 (E*) can not be selected at the same time.
- * Refer to page 5-11 for the option of digital pressure switch MP41 (E*).

Blank: Standard type (PG-20)

C: External pressure gauge (PG-40) CH: High pressure type + External pressure gauge (PG-40)

P: Pressure switch (MPS series)

Dimensions

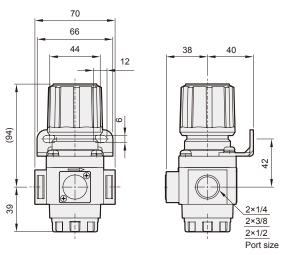

MAR401-P pneumatic pressure switch 98 49.5 40 34 8 94 36. 39 2×1/4 2×3/8 2×1/2 Port size

MPS Series





MAR401 Capacity / Backflow function valve instructions


/////indman

AIR UNIT (R.UNIT)

Flow feature

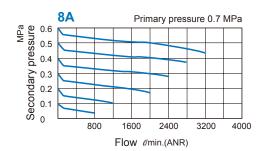


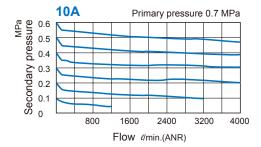

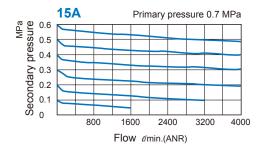


Installation direction

When choosing the flow direction, the backflow module can not be exchange with gauge. If you have special order request, please contact the business.

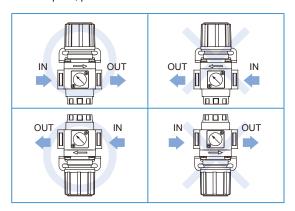

Precautions

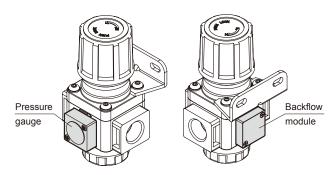


- When the air supply is cut off, the inlet pressure less than outlet pressure, the residual pressure return to the inlet side.
- Please set the inlet pressure to at least 0.05MPa higher than the set pressure.

Working principle

Normally, as the inlet pressure (IN) is higher than the setting pressure (pressure of outlet), the backflow function valve closed; if the inlet pressure is cut off and starts exhaust. backflow function valve opens. the pressure of Valve chamber is exhausted from IN port.

Normal air supply

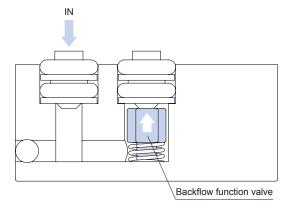

Cut off air source

